


Model: 617-2619 Instruction Manual DC: 122815

Twin Bells Alarm Clock

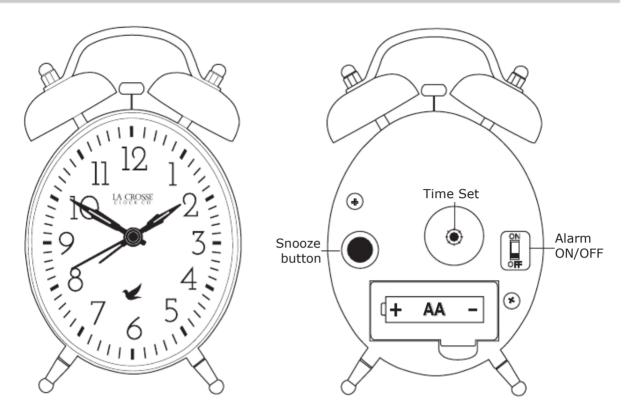

Setup:

- 1. Insert one AA battery (not included) according to polarity.
- 2. Pull out Time Set knob, then turn to set the time.

That's it! Place the clock where desired.

Alarm:

- 1. Turn the Time Set knob to adjust the alarm time.
- 2. Move the alarm ON/OFF switch to ON.
- Move the alarm ON/OFF switch to OFF to deactivate the alarm.

Snooze:

- When the alarm sounds, press the Snooze button to silence the alarm for 256 seconds.
- Press the Snooze button again to repeat the snooze feature.

Warranty:

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of 2 years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company Warranty Department 2830 South 26th Street. La Crosse, WI 54601

www.lacrosseclock.com/support

Specifications:

Power Requirements: 1 AA LR6 Alkaline Battery Battery Life: over 12 months

Care:

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment which is not to be used for an extended period of time.
- Remove expired battery promptly.
- The specs of this wall clock may change without prior notice.
- Improper use or unauthorized opening of housing voids warranty.