

**LA CROSSE®**  
**TECHNOLOGY**

## **GLOW WIRELESS CHARGING ALARM CLOCK**



**SET UP GUIDE**

MODEL NUMBER: C75785-AU

 
# Table of Contents

---

BASICS		ALARM		GLOW LIGHT	
Initial Setup	02	Setting the Alarm	07	Glow Light Selection	09
Power Up	02	Activate/Deactivate	08	Glow Light Brightness	09
Settings Menu Order	02	Snooze Duration	08		
Buttons	03				
LCD Display	04				
Ports	04				
LCD Display Brightness	05				
Auto-Dim Settings	05				
Display Modes	06				
Display Mode Options	06				
CHARGING		SUPPORT		APPENDIX	
5W Wireless Charger	10	Support	12	Specifications	13
Phone Compatibility	10	Stay in Touch	12	Trademarks & Warning	14
Wireless Charging FAQs	11	Warranty	13	Cautions	14
USB Charging Port	12			Recycling & Disposal	14

---

# Buttons

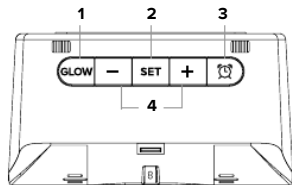

Back View



Top View

## 1. GLOW

Press to change the Glow Light color. Hold to turn Glow Light off.

## 2. SET

Press to change Display Modes. Hold to enter Settings Menu.

## 3. ALARM

Press to activate/deactivate alarm. Hold to enter Alarm Settings Menu.

## 4. PLUS/MINUS (+/-)

 
Press to increase/decrease Glow Light Brightness. Press to increase/decrease values in Settings Menu, hold to change values quickly.

## 5. SNOOZE/LIGHT

Press to snooze sounding alarm, adjust backlight, or hold for Auto-Dim settings.

## 6. RESET

Press to factory reset your clock.

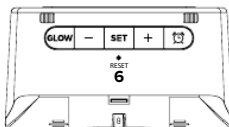

# LCD Display Brightness



## Adjusting the LCD Display Brightness


Press the **SNOOZE/LIGHT** button on the top of the clock to adjust the backlight intensity. There are 4 brightness levels, plus an off option.

## Auto-Dim Settings

Program your LCD display to automatically dim during preselected times.

 
1. Hold the **SNOOZE/LIGHT** button to enter the Auto-Dim Settings Menu.
2. Press the +/- buttons to turn the Auto-Dim feature on or off. Press **SNOOZE/LIGHT** to confirm.
3. Press the +/- buttons to adjust the starting hour. Press **SNOOZE/LIGHT** to confirm.
4. Press the +/- buttons to adjust the stopping hour. Press **SNOOZE/LIGHT** to confirm and exit.







The  icon will appear on the LCD when activated.
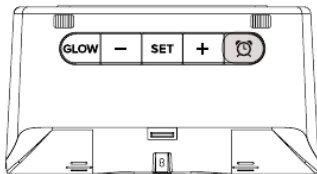
# Time Alarm

## Setting the Alarm



1. Hold the  button on the back of the clock to enter the Alarm Settings Menu.
2. Use the +/- buttons to set your desired time. Press  to confirm.
3. Next, use the +/- buttons to set your desired snooze duration (5 to 120 minutes). Press  to confirm and exit the Alarm Settings Menu.
4. Your sound alarm is now activated, indicated by the  icon on the LCD.

## Ascending Alarm

The alarm will increase in beep frequency over a 2-minute period. After the 2-minute time frame, the alarm will stop if not snoozed or turned off.

# Glow Light Selection

## Select Glow Light Color:

 
1. Press the GLOW button to turn on the Glow Light and toggle through the different light options.

### Glow Light Color Selection Order:

Cycle | Red | Yellow | Green | Cyan | Dark Blue | Purple | White



Press the GLOW button again to select an individual solid color. When a single color is selected, it will remain on that color. Select CYCLE to smoothly transition between all of the colors.

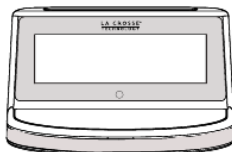

Glow Light



## 2. Glow Light Brightness

 
Use the +/- buttons to adjust the Glow Light Brightness. It has 4 intensity levels plus an OFF option. Holding the GLOW button will also turn off the Glow Light.

## Wireless Charging FAQs

### Q. Why is the blue light blinking?

- A. Phone is not centered on the charging pad.
- A. Your phone must be Qi Enabled to charge.
- A. If the phone has a large/thick case, it may interfere with charging.
- A. Foreign objects on the charging pad may make the light blink.

Blue  
LED Light

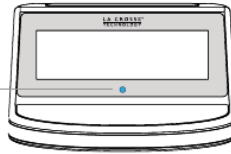

### Q. Why is the table surface getting warm?

- A. Ensure the clock is on a hard, clean surface.
- A. Do not place on cloth, paper, or other items that may obstruct airflow.
- A. Clear dust or other obstructions from the vents on the bottom of the clock.

### Important:

Wireless charging uses magnetic induction to charge your compatible smartphone. Do not place anything between your phone and the charging pad. Keep the charging pad clear of all foreign objects. Magnetic mounts, magnetic cases, or other objects between your phone and the wireless charger may reduce performance or damage magnetic strips or RFID chips found in some credit cards, security badges, passports, and key fobs. If your phone case holds any of these sensitive items, be sure to remove them before charging or make sure they are not between the back of your phone and the charging pad.

## Warranty

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product, relating to manufacturing defects in materials and workmanship.

**Contact:**

[www.lacrossetechnology.com/pages/international-support](http://www.lacrossetechnology.com/pages/international-support)



Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Black Forest Originals Grand Father Clock, Ltd.**  
DBA La Crosse Technology, Ltd.  
2809 Losey Blvd. South  
La Crosse, WI 54601

## Specifications

**Power Requirements:** 5.0VDC 2.5A-3.5A **Power Cord (Included)** HX13-0502500-AA-001

The plug on the power adapter is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

**LCD Brightness:** 4 Intensity Levels + OFF  
(Programmable Auto-Dim Backlight Option)

**Glow Light Brightness:** 4 Intensity Levels + OFF

**Programmable Snooze Duration:** 5 to 120 Minutes

**Indoor Temperature Range:** 0°C to 50°C  
(32°F to 122°F)

**Wireless Charger Power Output:** 5 Watts

**USB Charging Port:** 1 Amp Maximum Current  
(Charging Cord Not Included)

**Settings Backup:** The time and alarm settings will be saved for 3 minutes in the event it loses power. Full battery backup for extended times is not available.

**Dimensions:** 12.7 cm L x 13.56 cm W x 7.6 cm H  
(5" L x 5.33" W x 2.99" H)

**Factory Reset:** If you're experiencing issues with your clock, use a pen or paper clip to press the factory RESET button on the back of your clock.





LA CROSSE<sup>®</sup>  
TECHNOLOGY



---