

OPERATING AND INSTALLATION INSTRUCTIONS
FOR
OMEGA SLIDE-OUT RANGEHOODS

ORT6WXA

ORT9WXA

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS FOR OMEGA SLIDE-OUT RANGEHOODS

ORT6WXA, ORT9WXA

CONGRATULATIONS

Thank you for choosing one of our many fantastic rangehoods. We are confident that you will now be able to meet your cooking needs. Before you use the rangehood we strongly recommend that you read though the whole user manual which provides the description of this product and the proper use of its functions.

To avoid the ever-present risks involved with using an electrical appliance it is vital that the rangehood is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. It is important that you retain these instructions and your proof of purchase along with any other important documents about this product for future reference.

Due to continual product development, Omega reserves the right to alter specifications or appearances without notice.

CONTENTS

SECTION	PAGE NO.
Important Safety Instructions	4
Appliance Details	5
Installation	5-6
Operating Instructions	6
Cleaning	7
Replacing the Lamps	7
Troubleshooting	7
Warranty Details	8

DISPOSAL INFORMATION

- Most of the packing materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT: Read the assembly instruction section and safety precautions of this booklet carefully before removing the contents of this carton.

1. In certain circumstances electrical appliances may be a safety hazard.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.
3. Do not check the status of the filters while the cooker hood is operating.
4. Do not touch the light bulbs after appliance use.
5. Do not disconnect the appliance with wet hands and do not disconnect the power cord with extreme force.
6. Do not flambé underneath range hood.
7. Avoid free flame, as it may cause damage to the filters and be a fire hazard.
8. If frying food, ensure to check regularly to avoid the oil overheating and becoming a fire hazard.
9. Unplug the appliance before carrying out maintenance or replacing lamps.
10. If the power cord is damaged, it must be replaced by the manufacturer, an authorised service centre or similarly qualified persons to avoid a hazard.
11. Indoor use only.
12. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
13. It is recommended to operate the range hood prior to cooking.
14. It is recommended to leave the range hood in operation for 15 minutes after cooking is terminated in order to completely eliminate cooking vapours and odours.
15. Turn off the range hood when not in use.
16. Don't use the range hood if it is damaged, especially the supply cord and the case.
17. Don't immerse the range hood in liquid.
18. The exhaust air must not be discharged into a flue which is used for exhausting fumes from appliance burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
19. Regulations concerning the discharge of air have to be fulfilled. There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
20. Clean the surface of the cooker hood regularly using cloth moistened with denatured alcohol or non-abrasive liquid detergent.
21. There is a fire risk if cleaning is not carried out in accordance with the instruction.
22. The 600mm units are intended for use above hobs that are 600mm wide and the 900mm units are intended for use above hobs that are 900mm wide.
23. If the instruction for the minimum distance between the supporting surface of the cooking vessels on the hob and the lowest part of the range hood are specified by hob instructions, these instructions should be taken into account.
24. **CAUTION:** Accessible parts may become hot when used with cooking appliances.
25. **Warning:** Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

WHAT MAY BE NEEDED FOR INSTALLATION

Electric Drill	Duct Tape
Tape Measure	Jig Saw
Spirit Level	Ladder
Screwdrivers	Torch (If natural lighting is minimal)

APPLIANCE DETAILS

Rangehoods	ORT6WXA	ORT9WXA
Type	05/18	05/18
Rated Voltage	220 to 240V ~ 50Hz	220 to 240V ~ 50Hz
Rotation Method	Twin Motor, Twin Fan	Twin Motor, Twin Fan
Motor Input Power	100W + 100W	100W + 100W
Lamp (GU-10)	40W + 40W Halogen	40W + 40W Halogen
Rated Input Power	280W	280W
Max Airflow	400m ³ /hr	400m ³ /hr
Outlet Diameter	120mm	120mm
Power Connection	10 Amp plug	10 Amp plug

 
 
INSTALLATION

Method one (Mounting to a wall):

- 1) The cooker hoods must be placed at a minimum distance of 65cm from the cooking surface. The maximum distance should be 75cm for best effect.
- 2) To install onto the wall, drill 2 holes of Ø 8mm at a suitable place according with the centre distance of hole in the back of the cooker hood.
- 3) Insert the wall plug into the holes.
- 4) Insert the screws into the wall plugs and tighten.
- 5) Mount the cooker hood onto the fixed screws.
- 6) Put the one-way valve onto the cooker hood.

Method two (Mounting under a Cupboard):

- 1) The rangehood must be placed at a minimum distance of 65cm from the cooking surface. The maximum distance should be 75cm for best effect Drill 4 holes of $\varnothing 6\text{mm}$ at the bottom of the hanging cupboard.
- 2) Drill six $\varnothing 4\text{mm}$ holes at the bottom of the cupboard. Cut a minimum $\varnothing 120\text{mm}$ hole for the outlet venting (if required).
- 3) Put the one-way valve on the rangehood (if required), then install the rangehood onto the bottom of the cupboard, tighten the hood with enclosed 6 screws (M4*35mm).
- 4) Install the adjusted board on the bottom of the hood in order to keep out the gap between hood back and cupboard.

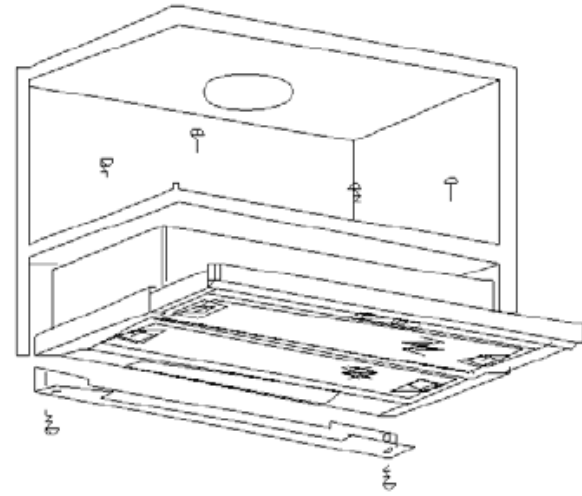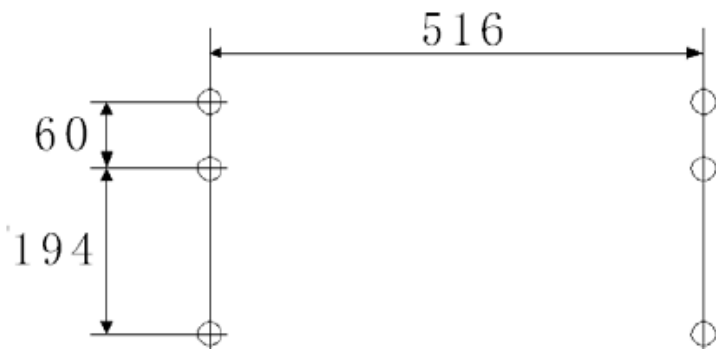

Recirculating or Ducted Venting:

The rangehood can be installed to vent the exhaust fumes out of the room (ducted) or to recirculate the air back into the room once it has been filtered (recirculating). To set the rangehood up to vent the exhaust fumes out of the room, adjust the venting switches (internal between the fans) to ducted and connect appropriate ducting to the one way valve.

To set the rangehood up to vent back into the room, remove the vent cover from the front of the rangehood and adjust the venting switch to recirculating. Note that carbon filters must also be fitted to the fan inlets as shown.

OPERATING INSTRUCTIONS

The controls are at the bottom front of the rangehood.

LIGHT CONTROLS:

Use switch 1 to turn the lights on (I) or off (0).

SPEED ADJUSTMENT:

Use switch 2 to adjust the fan speed from low (I) to high (III), and turn off (0).

NOTE: Always fully extend the slide-out when in use.

CLEANING

SAFETY PRECAUTION

Before cleaning your rangehood or performing any maintenance, please ensure that the range hood is turned off at the power point.

Do not use abrasive cleaners to clean the range hood. The use of warm soapy water and a cloth are recommended.

Ensure that the range hood is cleaned regularly, as a build-up of grease and fat may occur otherwise.

The filters on the range hood must be cleaned regularly to maintain efficiency, and prevent grease build up. The filter mesh is made of metal. It is recommended that this is undertaken every 4 – 6 weeks, depending on frequency of use. The filters can be cleaned with warm soapy water or a cloth.


Cleaning of the range hood must be performed as described above, otherwise there is a possibility of a fire hazard due to grease and fat build up.

REPLACING THE LAMPS

- 1) Before changing the lights, make sure that the appliance is unplugged from the power source and lamps are cool.
- 2) Open the filter and twist the face of the lamp anti-clockwise to disengage the lamp.
- 3) Change the GU-10 40W halogen lamp.
- 4) Replace the filter to the original position.

TROUBLESHOOTING

Fault	Possible Cause	Solution
Light on, but motor does not work	Fan switch turned off	Select a fan switch position.
	Fan switch failed	Contact Service Department.
	Motor failed	Contact Service Department.
Light does not work, motor does not work	House fuses blown	Reset/Replace fuses.
	Power cord loose or disconnected	Refit cord to power outlet. Switch power outlet on.
Oil leakage	One way valve and the air ventilation entrance are not tightly sealed	Take down the one way valve and seal with sealant.
	Leakage from the connection of U-shaped section and cover	Take U-shaped section down and seal.
Lights not working	Broken/Faulty globes	Contact Service Department.
Insufficient suction	The distance between the range hood and the gas top is too far	Refit the range hood to the correct distance.
The Range hood inclines	The fixing screw not tight enough	Tighten the hanging screw and make it horizontal.

 

 [omegaappliances](#)

 [omegaappliances_au](#)

omega. Always serves you well.