



VERTUO POP+



NESPRESSO

CLICK AND CHOOSE YOUR LANGUAGE

EN

FR

ES



SAFETY PRECAUTIONS



OVERVIEW



CONNECTIVITY



FIRST USE



COFFEE PREPARATION



ADAPT YOUR COFFEE VOLUME



CLEANING



DESCALING



EMPTYING



MACHINE SETTINGS



BLINKING SUMMARY



 
 
TROUBLESHOOTING



SPECIFICATIONS


SAFETY PRECAUTIONS

CAUTION: Before operating your coffee machine, please refer to the safety instructions leaflet to avoid any possible harm and damage.

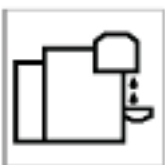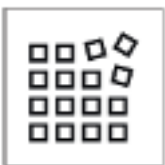

OVERVIEW

 MACHINE OVERVIEW

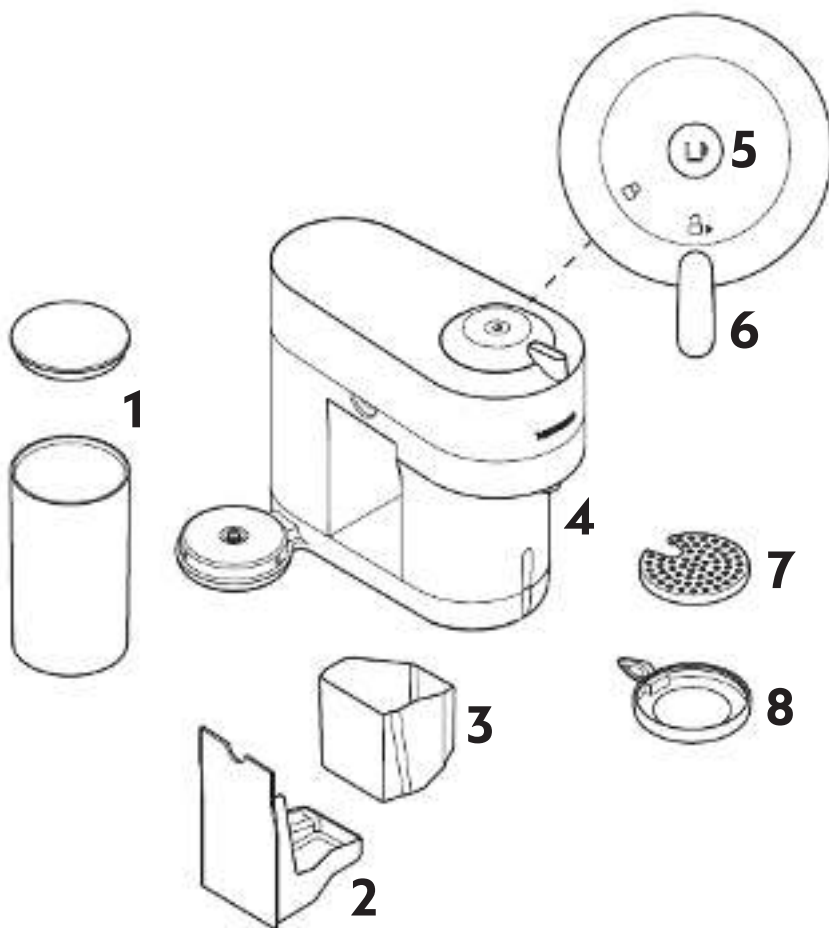

- 1 Water tank and lid
- 2 Drip tray
- 3 Container for used capsules
- 4 Coffee outlet
- 5 ON/OFF and coffee button
- 6 Locking/Unlocking lever
- 7 Drip grid
- 8 Adjustable cup support

 
 
 
PACKAGING CONTENT



- 1 Coffee machine
- 2 **Nespresso** capsules set
- 3 **Nespresso** welcome booklet
- 4 Safety instructions
- 5 Quick Start Guide
- 6 Warranty


4 + 5 + 6

i Unboxing: Some dust may be present on the surface of the machine due to the recycled materials used in the packaging. This is not dangerous, simply clean with a soft tissue.

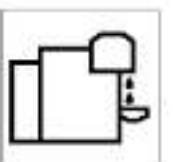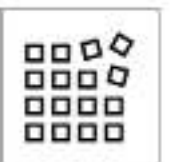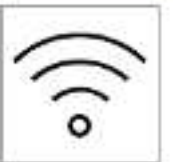

OPEN / CLOSE

 OPEN

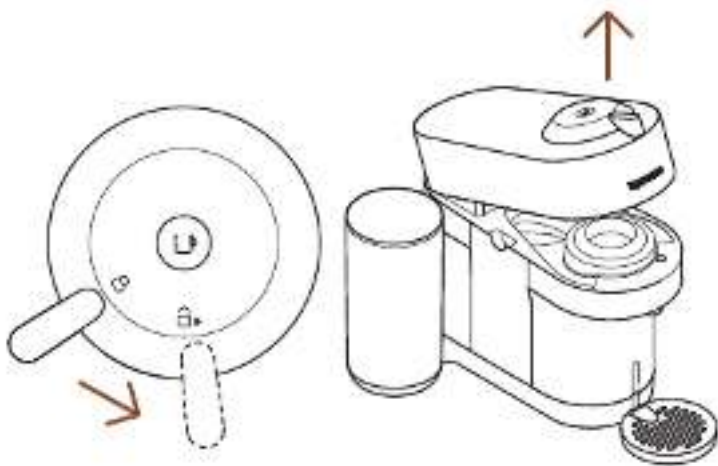

CLOSE



THE VERTUO SYSTEM

SUITABLE CAPSULES



S
Espresso
(40 ml / 1.4 oz)



M
Double Espresso
(80 ml / 2.8 oz)
Gran Lungo
(150 ml / 5.1 oz)



L
Mug
(230 ml / 7.8 oz)



XL
Alto, Cold Brew Style
(355 ml / 12.5 oz)
Carafe
(535 ml / 18.8 oz)

ACCESSORIES



Suitable
accessories



Espresso



Double Espresso



Gran Lungo



Mug



Reveal Glass



Not suitable
accessories

 
 
 


Alto



Carafe

Discover our full accessory collection on www.nespresso.com

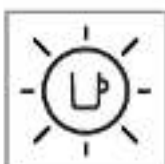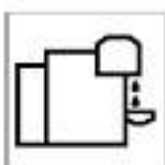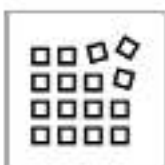

CONNECTIVITY

 
WHY SHOULD YOU PAIR YOUR VERTUO POP+ MACHINE?



BENEFITS OF CONNECTING YOUR VERTUO POP+ MACHINE

- **Smart Coffee:** Enjoy the latest coffee innovations from **Nespresso** by always keeping your machine up to date.
- **Expert advices:** Receive real-time tips with step by step instructions for descaling, rinsing and cleaning your machine.
- **Machine care:** Get support and tutorials for your machine care via your smartphone.

HOW TO CONNECT YOUR VERTUO POP+ MACHINE?

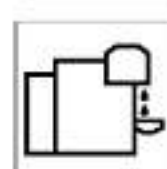




- 1** Download or update the **Nespresso** App.



 - 2** Launch the **Nespresso** App on your smartphone or your tablet.

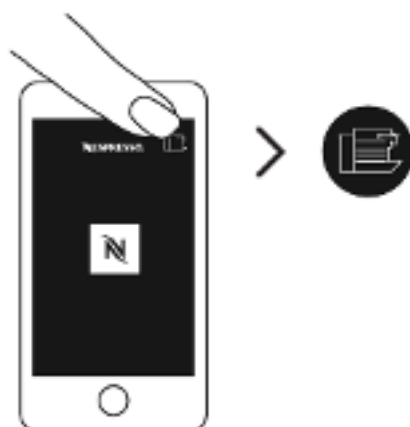




- 3** Click on the machine icon at the top right of your screen.



- 4** Follow the instructions via the **Nespresso** App.


* AppStore® is a trademark of Apple Inc., registered in the U.S. and other countries.

   ** Google Play and the Google Play logo are trademarks of Google LLC.

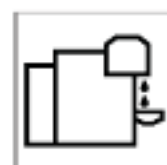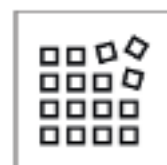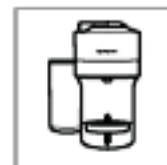

FIRST USE

 
ON / OFF

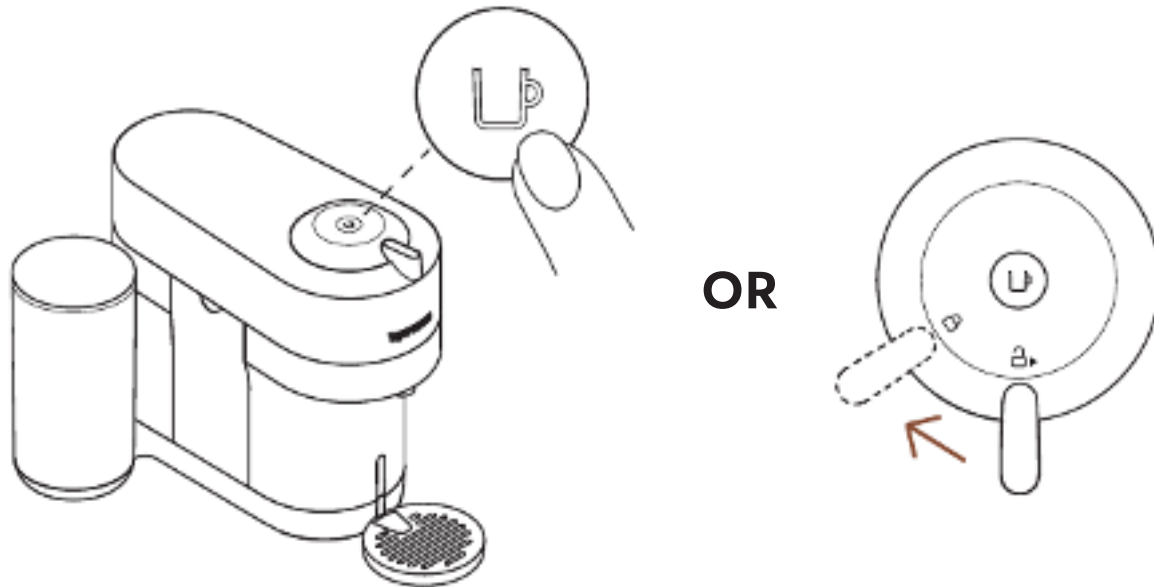

ON

Once the machine is plugged in, turn on by pressing once on the button or by closing the lever in the lock position (with the head closed).

 
- i** The light will blink for approximately 30 seconds while the machine is heating up. Once the light is steady, the machine is ready to be used.

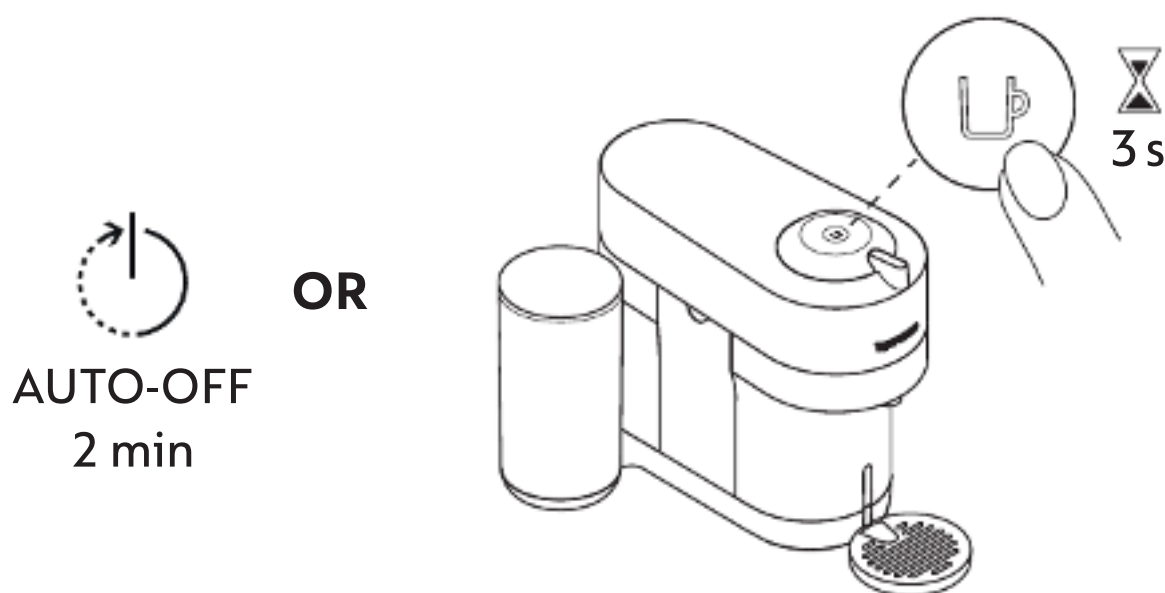


OFF

To save energy, the machine will turn off automatically after 2 minutes of non-use.

 
- i** The machine can be turned “OFF” manually at any time (when not in use) by pressing and holding the button for 3 seconds.

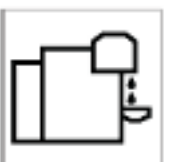



FIRST RINSING

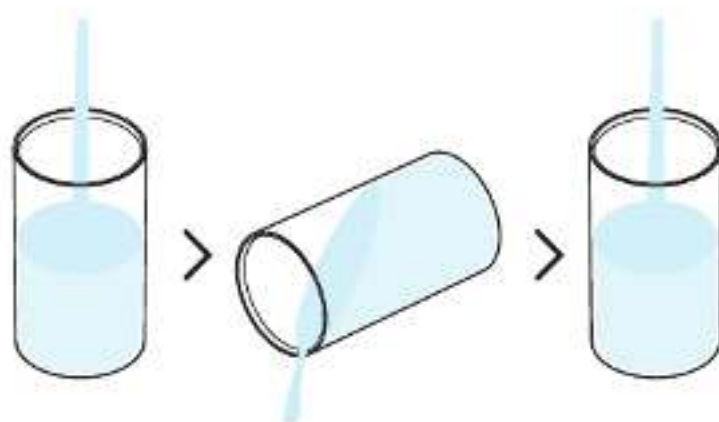 


 - 1** Rinse the water tank before filling it with only fresh potable water.

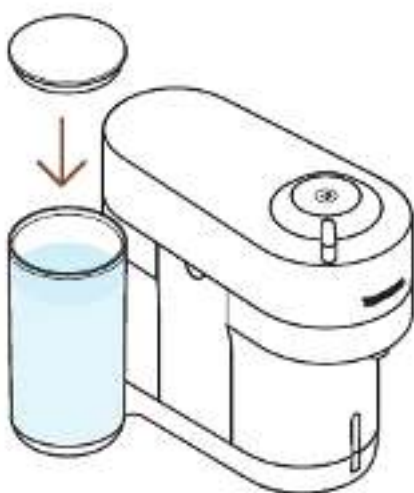


   - 2** Close the water tank with the lid and put the water tank back in position on the machine.

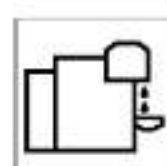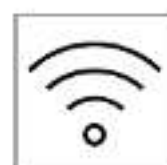


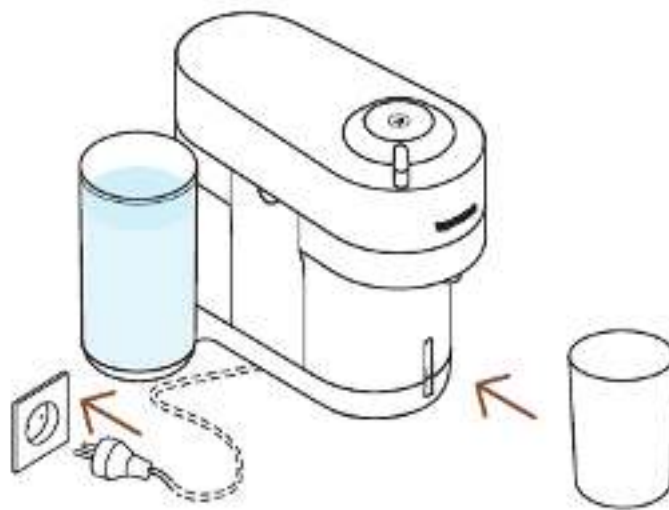


 
- 3** Plug the power cord, remove the cup support and place an empty container (at least 1 L / 34 oz) under the coffee outlet.

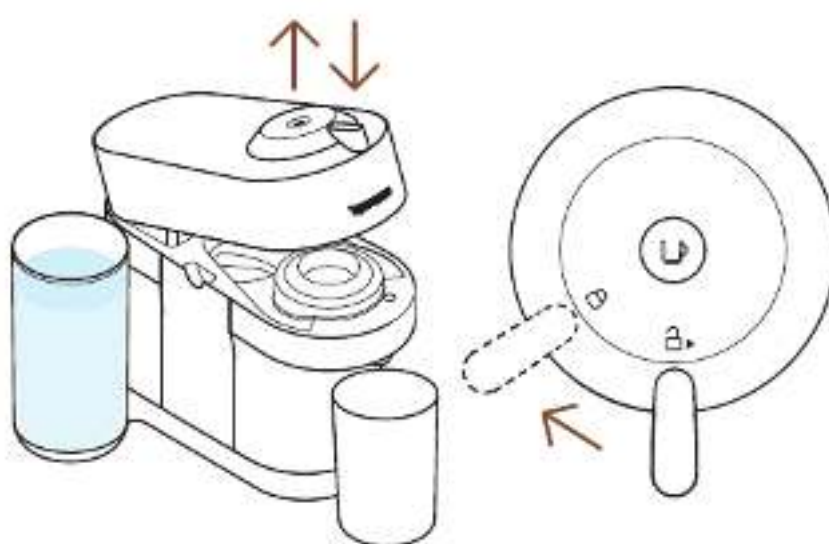


 - 4** Open and close the machine. Ensure the lever is in lock position.

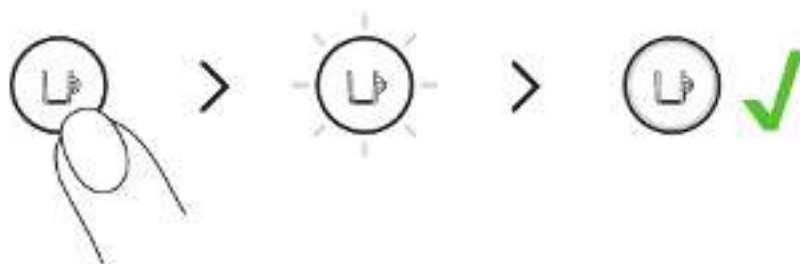

   - 5** Turn on the machine by clicking on the button once.

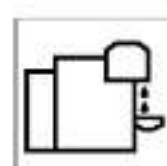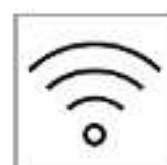


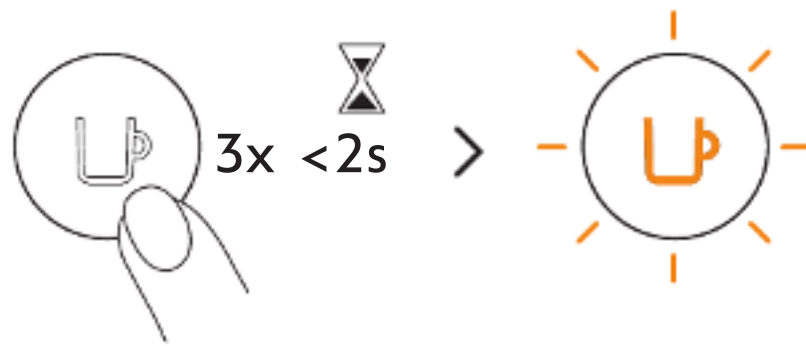


6 Press the button 3 times within 2 seconds.


i The machine will start rinsing. This procedure may take up to 7 minutes.

CAUTION: First read the safety precautions to avoid risks of fatal electrical shock and fire. Please ensure ground continuity when plugging the machine in the power outlet.

  
i When unpacking the machine, remove the plastic films.

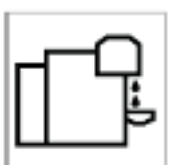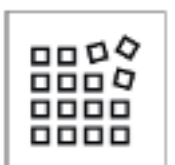

COFFEE PREPARATION

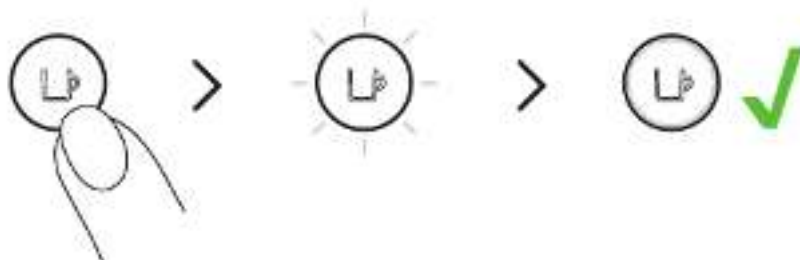 

 - 1 Turn on your machine by clicking once on the button or by closing the lever towards the lock position.

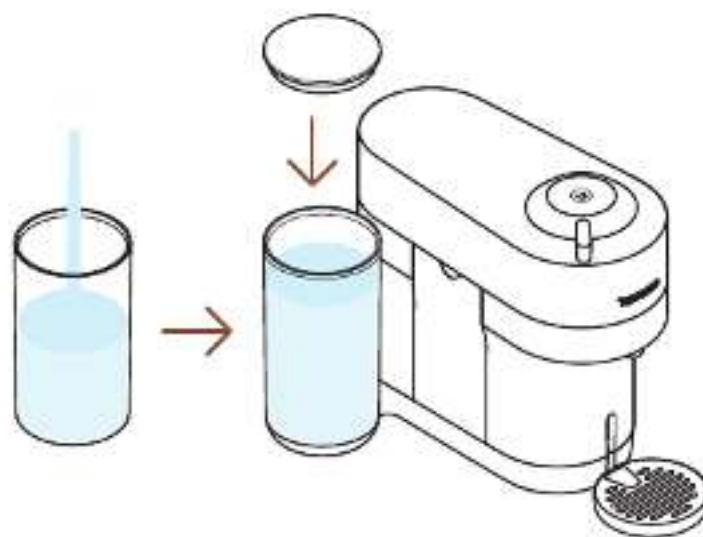

- 2 Fill the water tank with fresh potable water and put it back in position.

