



Operating & Installation Instructions

Washing Machine
(Household Use)

Model No. **NA-V115FW1**



It is essential to read these instructions.

EN

- Thank you for purchasing this product.
- Read these instructions carefully for optimum performance and safety before use.
 - Keep this manual for future reference.

Contents This washing machine has
"Dry Assist" function (P. 30).

Safety Precautions	2
Checking Your Appliance	7
Before Washing/Drying	8
Control Panel	10
Detergent	12
Auto Dose	14
Washing	16
Program List	18
Details of Programs	20
Washing Tips	22
Changing Program Settings	24
Dry Assist (Dry only)	30
Changing Appliance Settings	32
Maintenance	33
Troubleshooting	38
Error Display	44
Installation	
Choosing the Right Location	46
Moving and Installing	47
Connecting the Hoses	49
Test Run	51
Panasonic SmartApp+	52
Specifications	71



AWW9901CGFC0-0C0

Safety Precautions

WARNING

 
May cause serious injury or death

Children must not use it alone.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Setting the Child Lock. (P. 32)



**Hold
5 sec.**



May cause fire or electric shock


**Do not touch it
with wet hands.**




**Do not hold or
pull on the cord.**



Do not use.

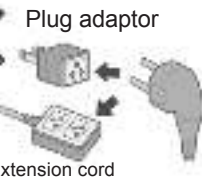

Fully insert it.

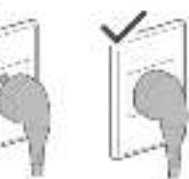


Do not use.




- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

In case of failure or damaged power cord, stop use and ask the electrical technician.

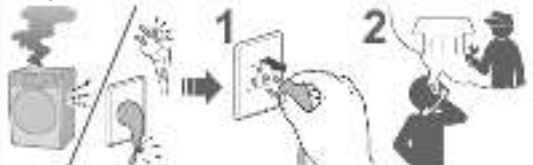

Accumulated dust may cause fire.

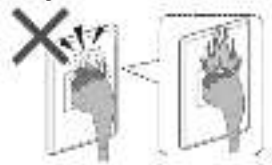

Securely insert the ground prong. Ask the electrical technician for a new socket.



Wipe the power plug periodically.



Use a socket appropriate for this appliance.

e.g.)



- The plug shape, socket shape and rating requirement vary with the region.

Keep away from flammable materials.



May cause failure

Do not disassemble, repair or modify it by yourself.



When using the "Panasonic SmartApp+" app

(Cause of malfunction due to radio waves from the appliance)

- Keep at least 15 cm away from the mounting part of the cardiac pacemaker.
- Keep away from medical equipment and automatic control equipment (automatic doors, fire alarms, etc.).

Safety Precautions (continued)



WARNING

May cause fire (For safety use of the dryer)

Do not dry items soiled with flammable materials.




- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, wax removers and cosmetic oils must not be dried in the appliance even after having been washed.

Empty all pockets.



- Make sure that no objects are left in any of the pockets. Pay particular attention to cigarette lighters and matches. They may cause fire.

Do not dry items made of rubber, etc.

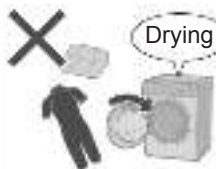

- Items such as foam rubber (latex foam), shower caps, waterproof textiles, airtight fabrics, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance. Such materials may be destroyed and thereby damage the appliance.
- Do not dry unwashed items in the appliance.

The lint must not be allowed to accumulate around the appliance.



Observe the following.

- Never stop the appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance is not to be used if industrial chemicals have been used for cleaning.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.



CAUTION

May cause water leakage

Turn off the water faucet.



Use new hose-sets.




- New hose-sets supplied with the appliance are to be used and old hose-sets should not be reused.

May cause injury


Be careful not to get your fingers caught.




Do not touch when it is hot.

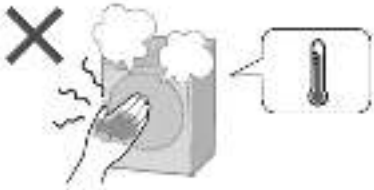

Do not climb on the appliance.

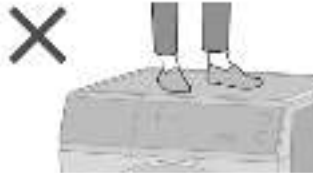

Install the appliance correctly.

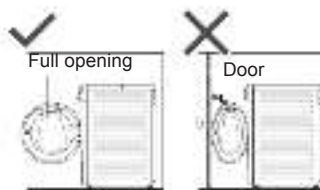

- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.

■ For maximum mass of dry cloth and pressure of tap water, see P. 71.

Safety Precautions (continued)



CAUTION

May cause failure

Keep away from heat and direct sunlight.



Remove anchor bolts before operation.



Do not obstruct.



- Do not obstruct the openings of the bottom face with carpet, etc.

Do not use hot water.



For machine-washable items only.



- This appliance is intended to be used in household.
This appliance is not intended to be used in applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - areas for communal use in blocks of flats or in launderettes.

Do not wash excessively oily clothes.




Follow the instructions.




- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

Checking Your Appliance

Part names

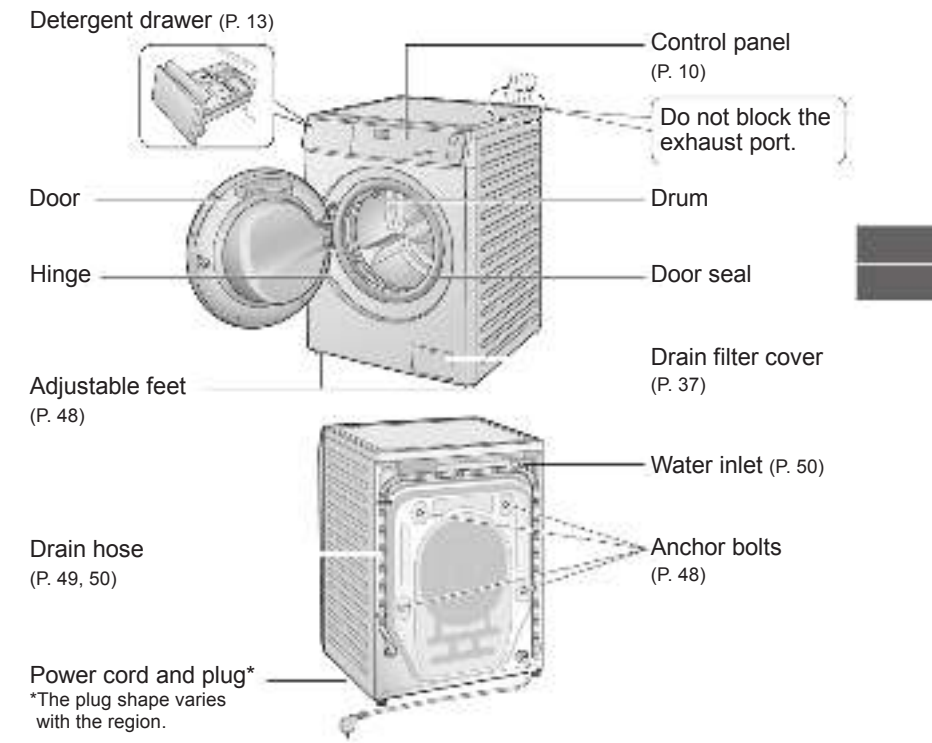

Accessories

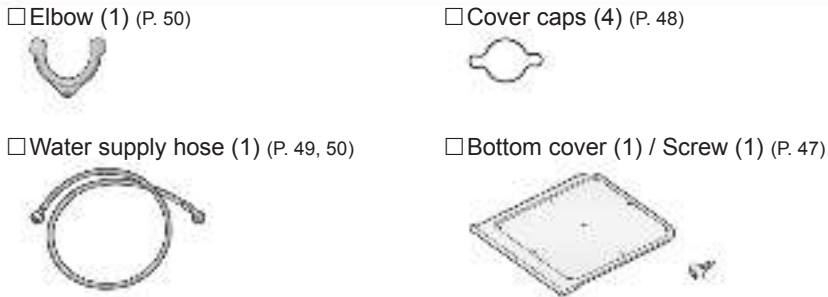

Before Washing/Drying

Preparing laundry

Before put clothes in drum


- Remove foreign objects.
- Use laundry nets for delicates and small items.



Pre-laundry check




Reverse

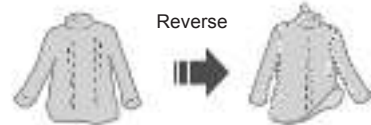

Clothes likely to pill



- Wash separately.

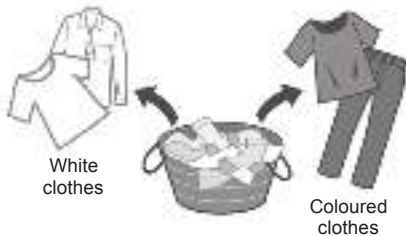

- Pretreat for heavily stains.



- Observe care labels.



Cannot wash or dry

Cannot wash or dry



Leather / fur



Silk, rayon and cupro
(Blended fabric)



Commercially
available washing aids



Cap with hard
core materials



Cushion, Pillow, etc.



Urethane / rubber
backed or thick mats



Paper diapers

Others ...

- Wrinkled and embossed articles
- Crepe fabric
- Deformable clothing (blazers, ties, dresses, etc.)
- Velvet

Cannot dry



Any of the above
marks



Woollen clothing



Tights or pantyhose



Mats and other
items with hair of
pets attached



Quilts



Starched clothing




Clothing with laces
or embroidery, new
synthetic fibres, etc.

NOTE

- May cause clothing deformation, damage and harm or malfunction to the appliance.

Control Panel

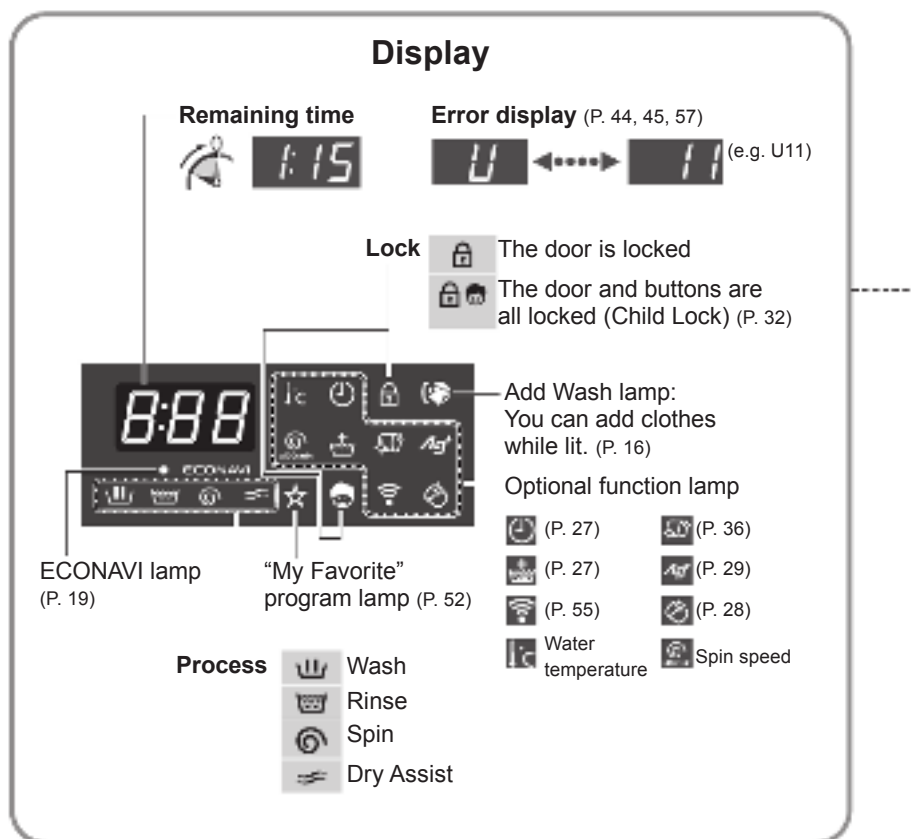


Touch operation

- If water, detergent or softener gets on, turn off and wipe off with a towel etc. immediately. (Cause of malfunction)



Control buttons

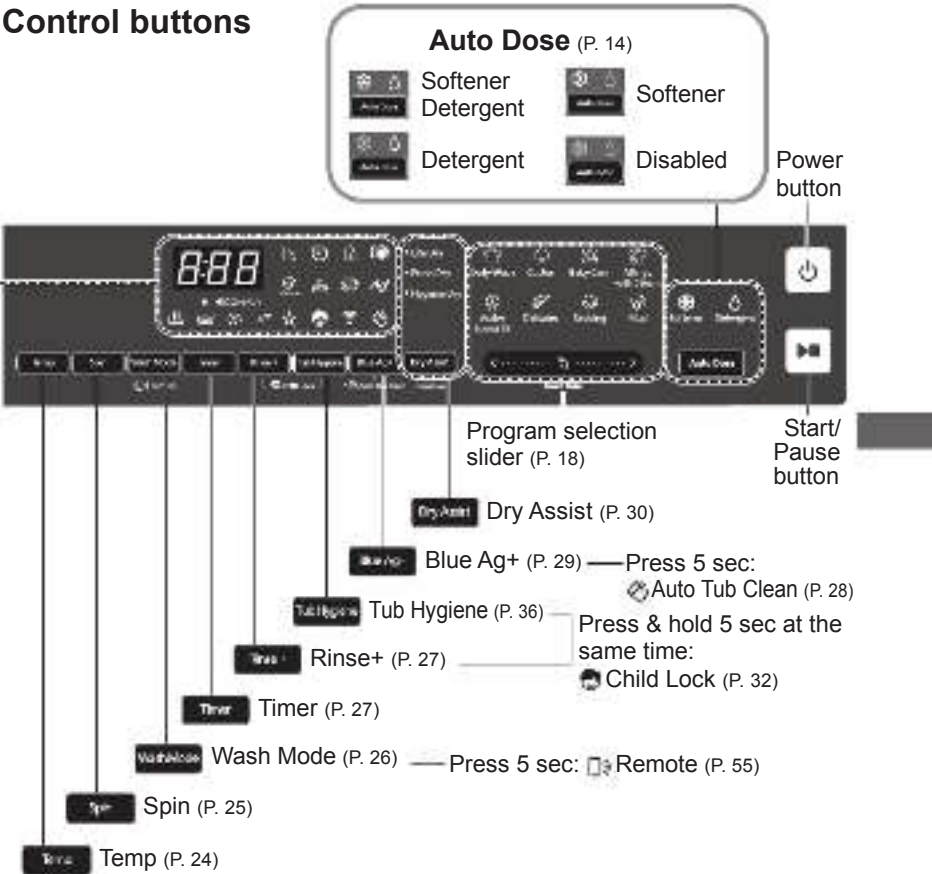

NOTE

- Turn off → back on
Turn off (3 sec.) On
- No operation → auto power off
On (Not pressed 10 min.) Auto Power off
- In case of a power failure
→ When the power recovers, operation resumes from where it stopped. (Auto Restart)

Detergent

- Follow the instructions on each package.


Detergent

Use a low foam detergent.

- To prevent powder detergent from remaining in the detergent drawer:



Manual Detergent tank

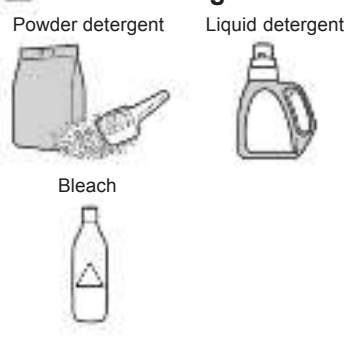



Bleach





NOTE

- Close detergent drawer completely before use to prevent water leakage.

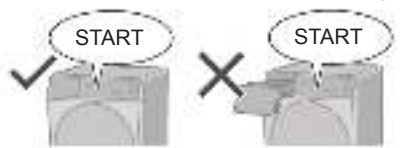

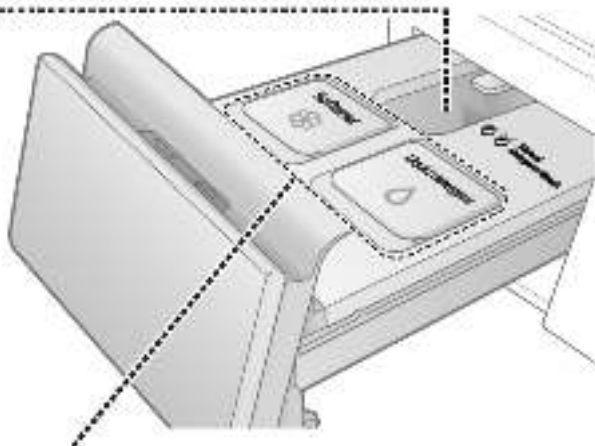

Auto Dose tank

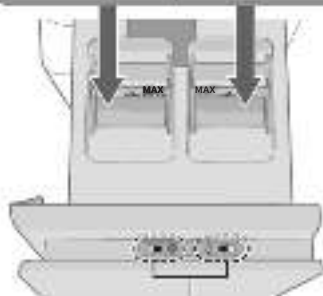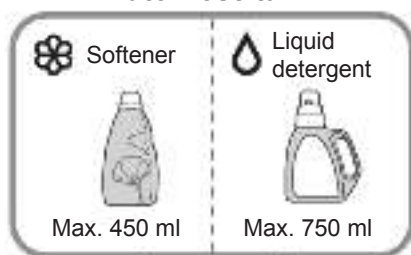

When adding detergent/softener, the window turns from black to pink (softener) and blue (detergent). Add detergent/softener when the window appears black.

NOTE

- Liquid detergent/softener left for a long time may clump or solidify. In that case, clean detergent drawer. (P. 34)




Do not use separated or solidified detergent/softener

Auto Dose

Detergent and softener will be automatically added depending on the amount of laundry and dose amount setting, available with all programs except “Tub Hygiene” and “Dry Assist (Dry only)”.


■ To supply detergent / softener

1



● Pull the drawer out.


2

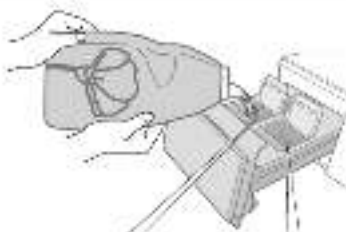

Softener
Max. 450 ml

Liquid detergent
Max. 750 ml

 
3




Close tank lid and push the drawer in completely

■ To set “Auto Dose” function


1



2




(P. 11)



(Default setting)

3




(The setting is memorized.)

■ Standard amount


- Dry cloth: 4 kg
- Liquid detergent: 30 ml
- Softener: 30 ml

■ To change the dose amount


1



2



Hold 3 sec

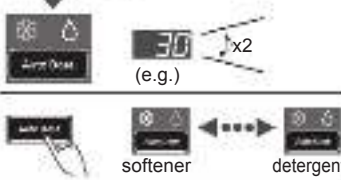


30
(e.g.)

x2

softener

detergent

3



● To increase or decrease

● Range value


● Detergent: 6 ml - 60 ml

● Softener: 6 ml - 81 ml

Step change: 3 ml

(The setting is memorized.)

4



x4

(NOTE)

● If there is water in the tub before, detergent and softener will not be automatically supplied when washing.

● When the ambient temperature is low, operation time may be longer because the detergent/softener may solidify.

[illegible]